

## 3.0 REGULATION OF AIR FLOW

### 3.1 MANUAL ADJUSTER for valves

Manual adjuster regulating air flow into the air ducts



### 3.2 MANUAL ADJUSTER for valves

Manual adjuster regulating air flow into the air ducts



### 3.3 LEVER AND BEARING BUSH

Levers for round and square steel axles of valve blades and volume damper valves




### 3.4 VOLUME DAMPER VALVES KIT

Kit without sealed valve blades



### 3.5 VOLUME DAMPER VALVES KIT

Kit with sealed valve blades

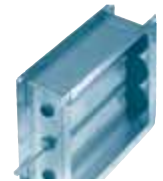

### 3.6 HIGH PRESSURE-VOLUME DAMPER VALVE



### 3.7 BACKFLOW TRAP

